

- > Tube size: Ø 6 ... 18 mm
- Simple tube connection and disconnection – no tools required
- Fewer component parts

 internally machined
 form in body to secure
 collet reduces number
 of potential leak paths
- Internal tube support as standard for greater safety

- > Corrosion resistant
- Easy identification all collets marked with tube size
- > Reduced assembly & maintenance times provide time/labour savings
- Greater reliability and reduced testing
- Ease of tube insertion in areas of restricted access



Technical features

Compressed air

Maximum working pressure: 0 to 10 bar (0 ... 145 psi) Ambient/Media temperature: -40 ... +100°C (-40 ... +212°F) Tubing:

Tube should be to DIN 74324

Standards & Legislation:

Fittings and tubing comply to department of transport Federal motor vehicle safety standard, (DOT FMVSS 106) (Mandatory requirements for Inch

tube fittings in U.S.A.)
Society for automotive engineers
SAE J1131 (inch tube and fittings)
German TUV approval and DIN
74324 (metric tube and fittings)

Swivel fittings:

The swivel feature should be used for positioning purposes only and should not be used as a rotating joint

Additional ranges:


The selection of metric fittings listed in this catalogue form part of a wider range of vehicle push-in fittings for further details consult Norgren Technical service.

Materials:

Body (straights), tube support, collet: brass BS 2874 CZ 121 Body (elbows, tees): brass BS 2874 CZ 122 'O'-ring: buna N (low NBR)

'O'-ring: buna N (low NBR Thread sealant: precoat 5

Method of assembly

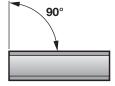

 Ensure that the end of the tube is cut square and is free from burrs.



2. Push the tube through the collet into the fitting.




3. Continue pushing the tube through the 'O'-ring until it bottoms on the tube stop. Then pull back on the tube to reinforce the collet teeth gripping action.



4. To disconnect - first ensure there is no air present. Push the tube into the fitting until it bottoms on the tube stop. Then hold down the collet and withdraw the tube.

Component functions

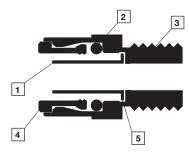

- 1 Tube support
- 2 'O'-ring
- 3 Body
- 4 Collet
- 5 Tube stop

Body

The body has an internally machined form to secure the collet(s), 'O'-Ring(s) and Tube support(s). It also has internal & externally machined thread form(s) for connection to ports where applicable.

Collet

The purpose of the collet is to grip the tube and ensure it is retained by the fitting at all times.

'O'-ring

The 'O'-Ring is to ensure adequate interference between the tube & fitting body therefore providing a pneumatic seal at all times.

Tube support

The tube support prevents the tube collapsing during extreme tensile loading conditions. Such conditions are only encountered during performance testing and far exceed those experienced during normal use.





Straight adaptors and connectors



Straight adaptor (BSP taper) 974530

Straight connector (equal) 974503

Reducing straight connector 974504





Page 4

Page 4

Elbow adaptors and connector



Universal hobbs elbow adaptor (metric) 974138

Page 2

Swivel elbow adaptor (BSP parallel)

Elbow adaptor (BSP taper) 974330

Elbow connector 974511



Page3

Tee connectors



Reducing tee connector 974588





Dimensions in mm

Page 4 Page 4



Page 2

Page 3

Page 3


Page 3


Page 3

Dimensions

Straight adaptor metric thread




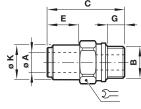

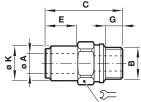

Straight adaptor
BSP taper thread



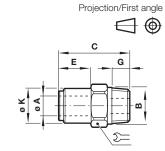


O/D Tube							Model
A	В	С	E	G	øκ	$\Sigma =$	
6	M10 x 1,0	28,5	13,5	8,0	13,0	14	97466631
6	M12 x 1,5	30,5	11,5	10,0	13,0	17	97466633
6	M14 x 1,5	31,5	13,5	10,0	13,0	19	97466634
6	M16 x 1,5	27,5	7,5	10,0	13,0	22	97466635
6	M22 x 1,5	30,5	5,0	12,0	13,0	27	97466638
8	M10 x 1,0	29,5	12,5	8,0	15,0	17	97466641
8	M12 x 1,5	31,5	12,5	10,0	15,0	17	97466643
8	M14 x 1,5	31,5	13,5	10,0	15,0	19	97466644
8	M16 x 1,5	31,5	11,5	10,0	15,0	22	97466645
8	M22 x 1,5	30,5	15,0	12,0	15,0	27	97466648
10	M10 x 1,0	33,0	16,0	8,0	17,0	17	97466651
10	M12 x 1,5	35,0	16,0	10,0	17,0	17	97466653
10	M14 x 1,5	5,0	15,0	10,0	17,0	19	97466654
10	M16 x 1,5	35,0	15,0	10,0	17,0	22	97466655
10	M22 x 1,5	31,0	5,5	12,0	17,0	27	97466658
12	M12 x 1,5	38,5	18,5	10,0	20,5	22	97466663
12	M14 x 1,5	38,5	18,5	10,0	20,5	22	97466664
12	M16 x 1,5	39,0	19,0	10,0	20,5	22	97466665
12	M22 x 1,5	35,0	9,5	12,0	20,5	27	97466668
15	M22 x 1,5	45,0	19,5	12,0	26,0	27	97466670
16	M16 x 1,5	42,5	19,5	10,0	26,0	27	97466679
16	M22 x 1,5	44,5	19,5	12,0	26,0	27	97466675
18	M22 x 1,5	44,5	18,5	12,0	29,0	30	97466680

O/D Tube	Taper						Model
A	В	С	E	G	øκ	$\Sigma =$	
6	R1/8	26,5	11,0	9,5	12,5	13	97453004
6	R1/4	27,0	9,5	11,1	12,5	14	97453010
8	R1/8	30,0	13,5	9,5	14,5	15	97453005
8	R1/4	30,0	11,5	11,1	14,5	15	97453011
10	R1/4	34,5	16,0	11,1	16,5	17	97453012
10	R3/8	34,5	13,5	12,5	16,5	17	97453020
12	R1/4	39,5	19,0	11,1	20,0	22	97453013



Swivel elbow adaptor metric thread




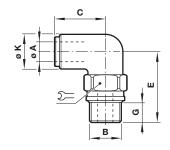

Tube A B	,	С	E	G	øк	<u>n</u>	Model
A B	•	C	_	G	ØK	<i></i>	
6 M	116 x 1,5	21,5	30,0	10,0	17,5	22	97452135
8 M	112 x 1,5	23,0	27,0	10,0	17,5	17	97452143
8 M	116 x 1,5	27,0	26,0	12,5	17,5	26	97452145
8 M	122 x 1,5	25,0	35,5	12,0	26,0	27	97452148
10 M	112 x 1,5	27,5	29,0	10,0	18,5	17	97452153
10 M	116 x 1,5	27,5	30,0	10,0	18,5	22	97452155
10 M	122 x 1,5	27,5	35,5	12,0	26,0	27	97452158
12 M	116 x 1,5	32,5	34,0	10,0	22,0	22	97452165
12 M	122 x 1,5	32,5	40,0	12,0	26,0	27	97452168

Swivel elbow adaptor BSP parallel thread




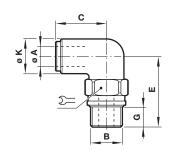

O/D Tube	BSP parallel						Model
A	В	С	E	G	øκ	$\Sigma =$	
6	R1/8	21,0	23,0	7,0	12,0	15,0	97410404
10	R1/4	27,5	31,0	10,0	15,0	19,0	97410412

Elbow adaptor BSP taper thread




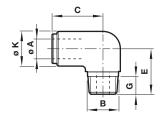

O/D Tube	BSP Taper					Model
A	В	С	E	G	øκ	
6	R1/8	20,5	20,0	9,5	14,0	97433004
6	R1/4	22,0	22,0	11,0	16,0	97433010
8	R1/4	23,0	22,0	11,0	16,0	97433011
10	R1/4	25,0	24,0	11,0	17,5	97433012
12	R1/4	30,0	27,0	11,0	24,0	97433013
12	R1/2	30.5	31.0	16.0	24.0	97433030

Universal hobbs elbow adaptor metric thread



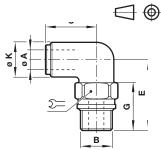


Dimensions in mm Projection/First angle

O/D Tube							Model
A	В	С	E	G	øκ	$\Sigma =$	
6	M10 x 1,0	23,5	26,0	16,0	14,0	15	97413831
6	M12 x 1,5	23,5	29,0	19,0	14,0	17	97413833
6	M16 x 1,5	24,5	34,0	21,5	17,5	24	97413835
6	M22 x 1,5	28,5	41,5	25,0	26,0	30	97413838
8	M12 x 1,5	25,5	31,5	19,0	17,5	17	97413843
8	M16 x 1,5	25,5	34,0	21,5	17,5	24	97413845
8	M22 x 1,5	28,5	41,5	25,0	26,0	30	97413848
10	M10 x 1,0	27,0	28,0	16,0	18,5	15	97413851
10	M12 x 1,5	29,0	31,0	19,0	18,5	17	97413853
10	M14 x 1,5	28,0	31,5	19,5	18,5	19	97413854
10	M16 x 1,5	29,0	33,5	21,5	18,5	24	97413855
10	M22 x 1,5	32,0	40,5	25,0	26,0	30	97413858
12	M16 x 1,5	32,0	35,5	21,5	22,0	24	97413865
12	M22 x 1,5	34,5	40,5	25,0	26,0	30	97413868
16	M16 x 1,5	38,0	38,5	25,0	26,0	24	97413879
16	M22 x 1,5	38,0	40,5	21,5	26,0	30	97413875
18	M22 x 1,5	39,5	43,0	25,0	23,0	30	97413880

Elbow connector



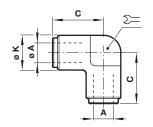


O/D Tube A	С	øк	> =	Model
6	21,0	13,0	10	97451104
U	,	13,0	10	37431104
8	23,0	15,0	11	97451105
9	27,0	17,0	14	97451113
10	27,0	17,0	14	97451106
12	32,0	20,5	16	97451107
15	38,5	27,0	27	97451115
16	39,0	27,0	27	97451108



Equal tee connector



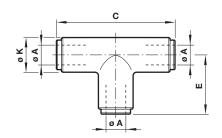


O/D Tube				Model
A	С	E	ØΚ	
6	42,0	21,0	13,0	97451404
8	45,5	23,0	15,0	97451405
9	54,0	27,0	14,0	97451413
10	54,0	27,0	17,0	97451406
12	64,0	32,0	20,5	97451407
15	77,0	38,5	27,0	97451415
16	78,0	39,0	27,0	97451408

Reducing tee connector

Dimensions in mm Projection/First angle




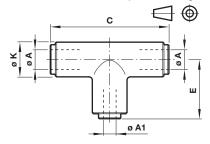

O/D Tube	Tube	Tube				Model
A	Α	Ø A1	С	E	øκ	
10	10	6	55,0	23,5	17,0	97458801
12	12	6	64,0	25,5	21,0	97458810
12	12	8	64,0	27,5	21,0	97458822

Equal straight connector




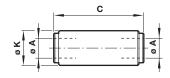

O/D Tube			Model
A	С	ØΚ	
6	35,6	13,0	97450304
8	37,6	15,0	97450305
9	44,1	17,0	97450313
10	44,1	17,0	97450306
11	46,1	19,0	97450336
12	51,1	20,5	97450307
14	50,2	22,0	97450392
15	61,5	25,4	97450315
16	61,5	25,4	97450308

Reducing straight connector



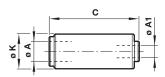

O/D Tube A	O/D Tube Ø A1	С	øк	Model
8	6	38,5	15,0	97450447
10	6	43,5	17,0	97450448

Warning

These products are intended for use in industrial compressed air and rail transport systems only. Do not use these products where pressures and temperatures can exceed those listed under

»Technical features/data«.

Before using these products with fluids other than those specified, for non-industrial applications, life-support systems or other applications not within published specifications, consult IMI NORGREN.

Through misuse, age, or malfunction, components used in fluid power systems can fail in various modes.

The system designer is warned to consider the failure modes of all component parts used in fluid power systems and to provide adequate safeguards to prevent personal injury or damage to equipment in the event of such failure.

System designers must provide a warning to end users in the system instructional manual if protection against a failure mode cannot be adequately provided.

System designers and end users are cautioned to review specific warnings found in instruction sheets packed and shipped with these products.